


SALINI

RANGEHOOD Instruction Manual

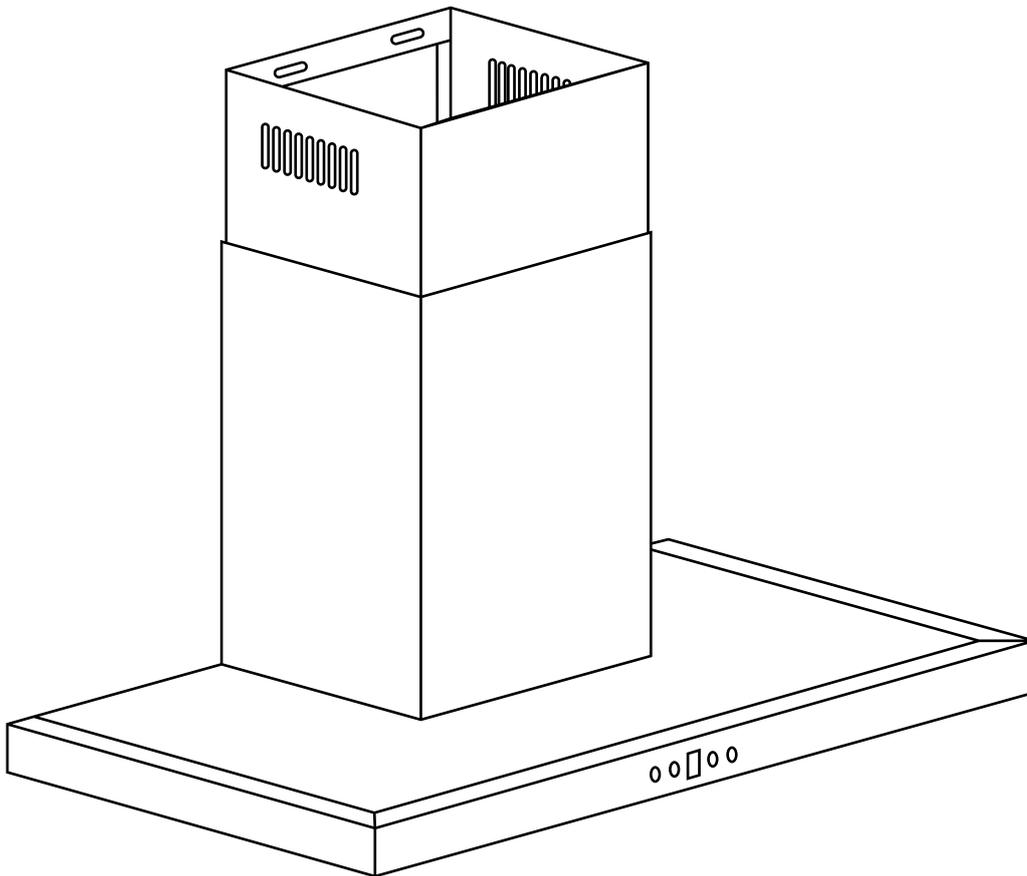

SRC-8535B

WWW.SALINI.COM.AU

TABLE OF CONTENTS

Important safety information	2-3
Installation	4-5
Using your appliance	6-7
Cleaning and maintenance	8
Troubleshooting	9
Technical data	10
Declaration of conformity	11

IMPORTANT:

This User Instruction Manual contains important information, including safety & installation points, which will enable you to get the most out of your appliance. Please keep it in a safe place so that it is easily available for future reference; for you or any person not familiar with the operation of the appliance.

IMPORTANT SAFETY INFORMATION

General Information

- Carefully read the following important information regarding installation safety and maintenance. Keep this information booklet accessible for further consultations.
- This appliance is designed for domestic household use and designed to be used indoors only.
- **IMPORTANT:** Your product warranty will be void if the installation is not in accordance with the instructions. The installation must be carried out by a suitably qualified person, in accordance with the manufacturer's instructions, and must be connected in accordance with all local electrical rules and specification.
- The use of this appliance for any other purpose or in any other environment will void warranty.
- Your new appliance is guaranteed against electrical or mechanical defects, subject to certain exclusions, the foregoing does not affect your statutory rights.
- Repairs may only be carried out by Service Engineers or an authorised service agent.
- Check the appliance for damage after unpacking it. Do not connect or install the appliance if it has been damaged in transport as this will void the warranty.

Warning and safety instructions



CAUTION:

Ensure there is adequate ventilation of the room when the rangehood is used at the same time as appliances burning gas or other fuels. (Not applicable to appliances that only discharge the air back into the room.)

- The range hood is used on 220/240v, 50Hz.
- This appliance complies with all current Australian and European safety legislation and designed to operate safely in normal use.
- Follow the local laws applicable for external air evacuation.
- Appliance shall only be used with rated voltage and frequency.
- There is a fire risk if cleaning is not carried out in accordance with the instructions.
- Ensure adequate ventilation in the environment for the safe operation of the range hood.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Please keep the room draughty when your rangehood and gas hob are working.
- Do not exhaust the gas from rangehood through the same heated flue which is for the gas from gas hob and other kitchen appliances.
- Before installation and usage, read all the instructions and make sure that the voltage (V) and the frequency (Hz) indicated on your rangehood are exactly the same as the voltage (V) and the frequency (Hz) in your home.

- Do not check the status of the filters while the rangehood is operating.
- The range hood and its filter mesh should be cleaned regularly in order to keep in good working order.
- Do not touch the light bulbs after appliance use.
- Do not disconnect the appliance with wet hands or force the supply cord.
- Disconnect the electrical plug prior to any maintenance or cleaning.
- Do not flambé under the rangehood.
- Cleaning should be carried out in accordance with the "Cleaning and Maintenance" section to avoid possible hazards.
- If the power cord is damaged it must be replaced by the manufacturer or a qualified service engineer.
- In the event of any incident caused by a technical fault, disconnect the power and report the fault to the service centre to be repaired.
- Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding collection systems available.



CAUTION! Accessible parts may become hot when used with cooking appliances.

Electrical Caution




CAUTION! Cleaning operations must only be carried out when the range hood is cool and disconnected from the power supply.

- Any work on electric equipment and systems may only be carried out by authorized qualified persons.
- In case of any damage, switch off the appliance and disconnect it from the power supply
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- **WARNING:** Ensure that the appliance is switched off before replacing the light globe to avoid the possibility of electric shock.


INSTALLATION INSTRUCTIONS

- Before installation, please ensure the area is clean to avoid suction of any remaining bits of broken wood and dust.
- The range hood cannot share the same air ventilation tube with other appliances such as gas tubes, warmer tubes, and hot wind tubes.
- The bending of the ventilation tube should be $\geq 120^\circ$, parallel or above the start point and should be connected to the external wall.
- After installation, make sure that the extractor is level to avoid grease collection at one end.

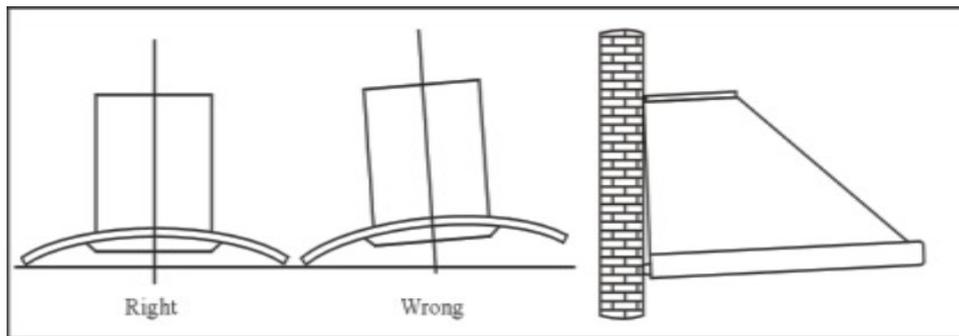


Pic5

- The range hood should be placed at a distance of 65-75cm (26-30inch) from the cooking surface for the best effect. See Pic 1.
- Install the hooks on the wall according to the installation height and keep it level. The fixed position of the inside chimney bracket is the place of chimney. See Pic 2
- Fix the outside chimney bracket on the outside chimney, and be sure that the inside chimney height can be adjusted freely. Attach the extendable pipe. Install the extendable pipe and chimney on the range hood canopy. See Pic 3.
- Put the range hood on the hook. See Pic 4.
- Adjust the height of the inside chimney to the position of the inside chimney bracket on the wall. Once adjusted to the correct position, fix the body with the safety screws. See Pic 5.

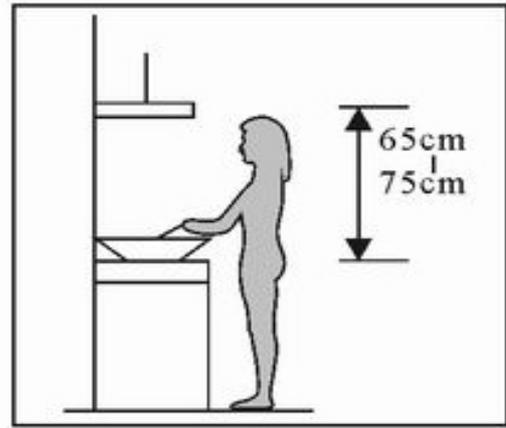


Pic1

Note: The two safety vents are positioned on the back casing, with a diameter of 6mm.

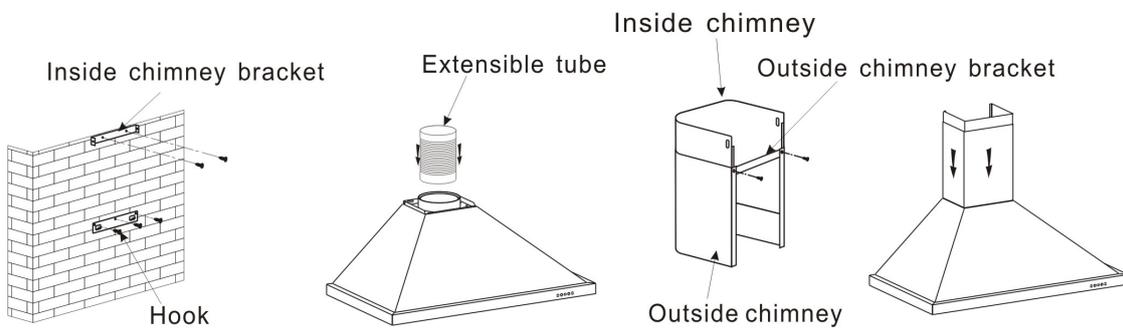


Pic2

Pic3

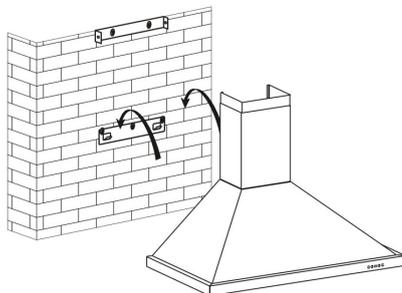

Pic4

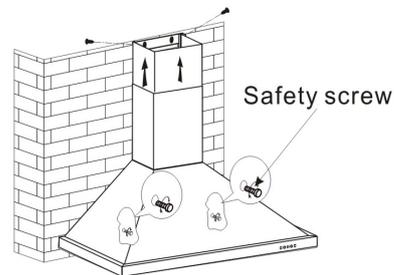


Pic5

USING YOUR APPLIANCE

Features

- The range hood uses high quality materials in a streamlined design.
- Equipped with a powerful electric motor and centrifugal leaf; it produces strong suction, low noise and an easy to clean non-stick grease filter.
- The low voltage circuit board control is isolated (12vAC input) for additional safety.
- The special wind tunnel construction and oil collector design ensure loose dirt will be absorbed in a second.

Touch Control with LED Display

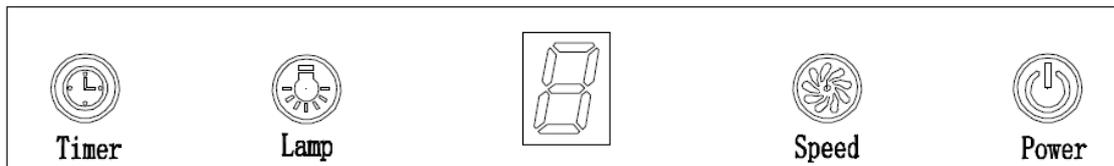

LED Touch control have four buttons:  (Timer),  (Lamp),  (Speed)  (Power).

See Pic

- Power on: After you have connected the rangehood to the main supply, the button backlight will turn on. The backlight will turn off after 30s without any operation and the rangehood will enter into stand-by mode.
- Press  button once, lights will be on. Press  button again; lights will be off.
- Turn on hood and select the speed, use button "", the motor works at 3 speeds, low, mid and high, and the LED display will display "1", "2", "3".
- Press  once, the motor starts to work at low speed and the LED display will display "1",
- Press  again base on the low speed, the motor works at mid speed and the LED display will display "2",
- Press  again base on the mid speed, the motor works at high speed and the LED display will display "3".
- Go on pressing  button, the hood works at low speed again and it repeat: "low→mid→high→low→mid..."

- Press  button once, the hood will work at the speed which it works last time. Press  button again, the hood stop working.
- The time button  works when the motor is working only.
- Press , the rangehood enter into timer setting mode. The max delay time is 9 min, and the LED display will display "9". When the timer is set, the LED display will display "9", "8", "7"..... decreasing by every minute, when it display "0", the motor will start working.
- Press  once, the rangehood will enter into timer setting mode, press  once again, the rangehood will exit the timer setting mode. Press  once when the rangehood is working at timer setting, the rangehood will exit the timer setting mode automatically.


CLEANING AND MAINTENANCE

Cleaning of Carbon Grease Filter Mesh

The filter mesh is made of high-density stainless steel. Please do not use a corrosive detergent on it. Keeping this filter clean will keep the appliance running correctly. Follow the guidelines below.

Method 1: Put the mesh into 40-50°C clean water, pour on detergent, and soak for 2-3 mins. Wear gloves and clean with a soft brush. Do not apply too much pressure as the mesh is delicate and will damage easily.

Method 2: If instructed to do so, it can be put into a dishwasher. Set the temperature to around 60°C.

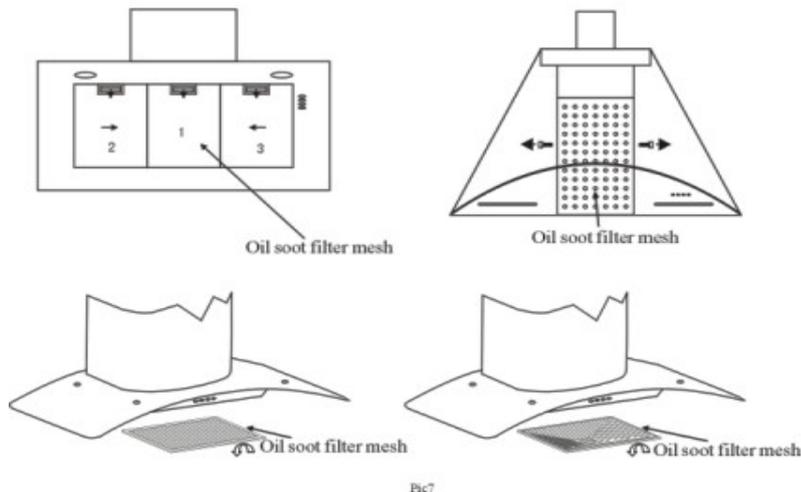

Cleaning Range Hood

- To protect the main body from corrosion over a long period of time, the range hood should be cleaned with hot water and a non-corrosive detergent every two months.
- Do not use an abrasive detergent for it will damage the body.
- Keep the motor and other spare parts free from water, as this will cause damage to the appliance.
- Before cleaning the appliance please remember to disconnect from power.
- The carbon filter shouldn't be exposed to heat.
- Do not tear open the fixed bar around the carbon filter.

TROUBLESHOOTING

If you suspect that your appliance is not functioning correctly, we advise you to read below troubleshooting information to help you identify and assess how to best rectify any issues.


Servicing of the appliance must only be carried out by an authorised service representative and the appliance must not be modified. Power must be disconnected before any servicing or maintenance is conducted.

Fault	Cause	Solution
Light on, but motor does not work	The leaf is blocked	Remove the blockage
	The capacitor is damaged	Replace capacitor
	The motor jammed; bearings damaged	Replace motor
	There is a bad smell from the motor	Replace motor
Light does not work; motor does not work	Beside the above mentioned, check the following:	
	Light damaged	Replace lights
Hood Vibrates	Power cord loose	Connect the wires as per the electrical diagram
	The leaf damaged and causes shaking	Replace the leaf
	The motor is not tightly secured	Lock the motor tightly
Insufficient suction	The body is not tightly secured	Attach the body tightly
	The distance between the body and the gas top too long	Readjust the distance
The machine inclines	The fixing screws not tight enough	Tighten the hanging screw and make it horizontal
	The hanging screws not tight enough	Tighten the hanging screw and make it horizontal

TECHNICAL DATA

Specifications

Model	SRC-8535B
Width	900mm
Depth	500mm
Height/Max Height	550-1030mm
Extraction/ Max Air Flow	700m ³ /h
Functions/Speed	3
Noise When Working	60 dB(A)
Rated Voltage	220-240V ~ 50Hz
Illumination	≅ 1.5W x2
Max Rated Inputs (Total power)	193W
Amps	0.81 A

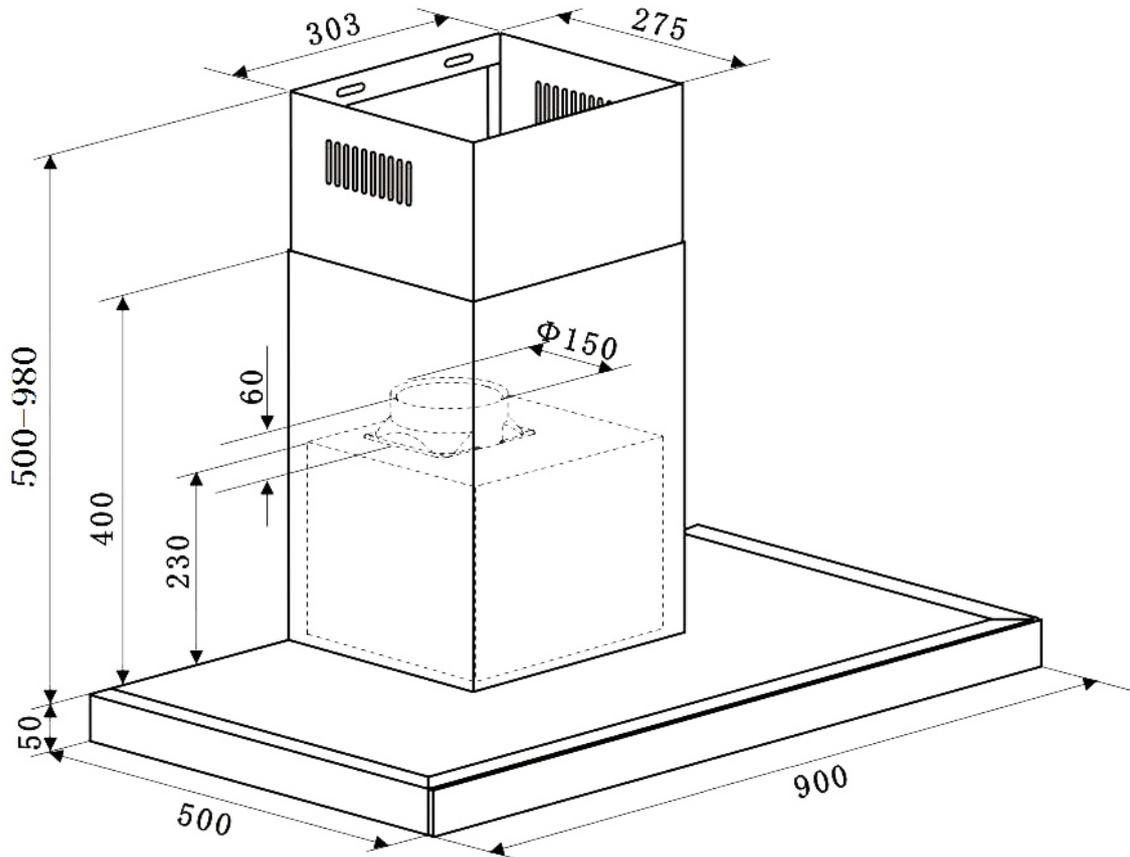

DECLARATION OF CONFORMITY

Australian Standards

This product has been designed and manufactured to comply with all relevant Australian and New Zealand Standards.

AS/NZS 60335.1 General Requirements for Domestic Electrical Appliances

AS/NZS 60335.2.6 Specific Requirements for Domestic Electrical Cooking Appliances

This appliance is SAA certified

Installation of the appliance must be only be undertaken by a licenced electrician who can provide a compliance certificate.

This appliance is intended for domestic use only.

Copyright © SALINI Appliances 2016. All rights reserved.

The product specifications in this booklet apply to the specific products and models described at the date of issue, these specifications may change at any time. You should therefore check with your Dealer for the latest issue.

SALINI