


SALINI

CERAMIC COOKTOP Instruction Manual

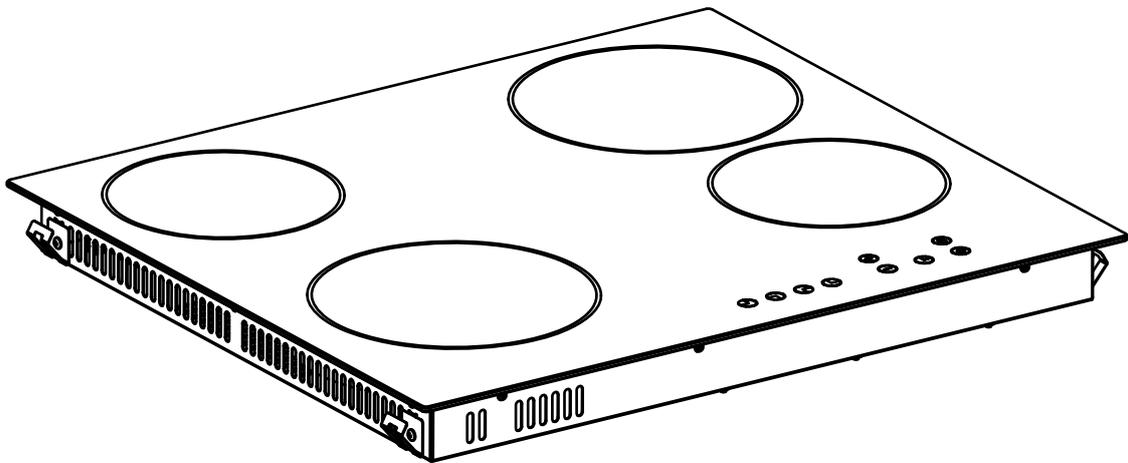

SCC-4602B

WWW.SALINI.COM.AU

CONTENTS

Important safety information	2-4
Description of the appliance	5
Using your appliance	6-9
Installation	10-13
Cleaning and Maintenance	14-15
Technical data	16
Declaration of conformity	17

IMPORTANT:

This User Instruction Manual contains important information, including safety & installation points, which will enable you to get the most out of your appliance. Please keep it in a safe place so that it is easily available for future reference; for you or any person not familiar with the operation of the appliance.

IMPORTANT SAFETY INFORMATION



WARNING!

Do not use or attempt to install this appliance until you have read this instruction manual. This appliance is intended for household use only.

General Information

- This appliance is designed for domestic household use and designed to be built into a standard kitchen benchtop.
- **IMPORTANT:** Your product warranty will be void if the installation is not in accordance with the instructions. The installation must be carried out by a suitably qualified person, in accordance with the manufacturer's instructions, and must be connected in accordance with all local electrical rules specification.
- The use of this appliance for any other purpose or in any other environment will void warranty.
- Your new appliance is guaranteed against electrical or mechanical defects, subject to certain exclusions, the foregoing does not affect your statutory rights.
- Repairs may only be carried out by Service Engineers or an authorised service agent.
- Check the appliance for damage after unpacking it. Do not connect or install the appliance if it has been damaged in transport as this will void the warranty.

Warning and safety instructions



CAUTION: The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. While in operation, direct contact with the hob may cause burns.

- This appliance complies with all current Australian and European safety legislation, and designed to operate safely in normal use, however the appliance surfaces will become hot during use and retain heat after operation.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- During use the appliance becomes hot. Care should be taken to avoid touching the ceramic hobs.
- The first few times the hob top is used, it may give off an acrid, burning smell. This smell will disappear completely with repeated use.
- Do not switch on the hob until a pan has been placed on it.

- The positions where the heat will radiate from are clearly marked on the hob top. The saucepans must be positioned exactly on these zones for efficient heating to occur. Pans should have the same diameter as the cooking zone that they are being used on.
- You should not use saucepans with rough bottoms, as this can scratch the ceramic surface.
- Before use, make sure that the bottoms of the saucepans are clean and dry.
- Do not put pans weighing over 25kg on the hob.
- The best thickness for the bottom of the pans is 2 – 3 mm of enameled steel and 4 – 6 mm for stainless steel with sandwich type bottoms.
- If these rules are not followed, then there will be a great loss of heat and energy. Heat not absorbed by the saucepan, will spread to the hob, frame and surrounding cabinets.
- Food or liquid that has high sugar content may damage the hob top if it comes into contact with the ceramic hob surface. Any spillages should be wiped up immediately, however this may not prevent the hob surface from becoming damaged.
- Do not leave ceramic hob unattended when frying. Oils and fats may catch fire due to overheating or boiling over.
- Do not use the hob if the surface becomes broken or cracked. You should switch off the appliance to avoid the possibility of electric shock; contact the dealer customer care department immediately.
- Do not use the ceramic hob in the event of a technical fault. Any faults must be fixed by an appropriately qualified and authorized person.
- In the event of any incident caused by a technical fault, disconnect the power and report the fault to the service centre to be repaired.
- Ensure that small items of household equipment, including connection leads, do not touch the hob as the insulation material of this equipment is usually not resistant to high temperatures.
- Never try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Cleaning should be carried out in accordance with the "Cleaning and Maintenance" section to avoid possible hazards
- **DO NOT** use a steam cleaner to clean the cooktop.
- Use only hob guards designed by the manufacturer of the cooking appliance or indicated by the manufacturer of the appliance in the instructions for use as suitable or hob guards incorporated in the appliance. The use of inappropriate guards can cause accidents.
- **IMPORTANT:** The ceramic hob surface is designed to be tough; however can be damaged. Especially if pointed or hard objects are allowed to fall on it with some force.



CAUTION: Do not use the hob if the surface becomes broken or cracked. You should switch off the appliance to avoid the possibility of electric shock; contact the dealer customer care department immediately.

Electrical Caution



CAUTION! Cleaning operations must only be carried out when the cooktop is cool and disconnected from the power supply.


- Any work on electric equipment and systems may only be carried out by authorized qualified persons.
- In case of any damage, switch off the appliance and disconnect it from the power supply
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Child Safety

- **WARNING:** Accessible parts may become hot during use.
- We strongly recommend that babies and young children are prevented from being near to the appliance and not allowed to touch the appliance at any time.
- If it is necessary for younger family members to be in the kitchen, please ensure that they are kept under close supervision at all times.
- Cleaning and shall not be carried out by children without supervision.
- The packaging materials will be dangerous for children. Keep the packaging materials away from children. Please dispose of all parts of the packaging according to environmental obligation.

DESCRIPTION OF THE APPLIANCE

Ceramic hob 4 zone schematic diagram

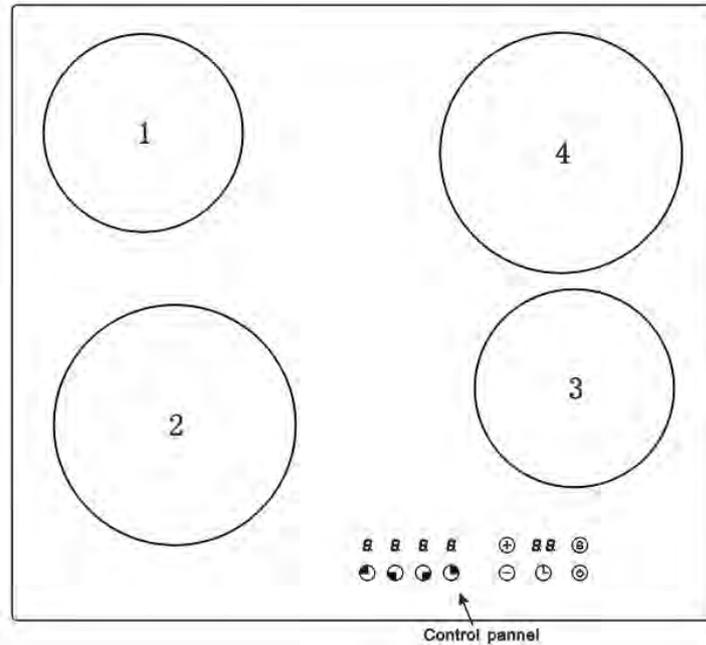


Surface layout table

Model	Burner Plate 1 power (kW)	Burner Plate 2 power (kW)	Burner Plate 3 power (kW)	Burner Plate 4 power (kW)	Total power (kW)
SCC-4602B	1.2	1.8	1.2	1.8	6.0

Note: 1.2 kW hyperspeed zones (diameter 165 mm); 1.7 kW hyperspeed zones (inside diameter 140 mm, outside diameter 200 mm); 1.8 kW hyperspeed zones (diameter 200 mm); 2.0 kW hyperspeed zones (diameter 165 mm, long 270mm); 2.2 kW hyperspeed zones (inside diameter 160 mm, outside diameter 230 mm).

Control panel layout

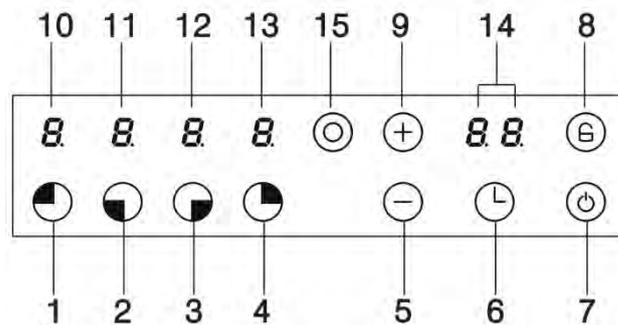

- | | | | |
|----|--|-----|---------------------------------------|
| 1. | Cooking zone rear left select button | 9. | Plus button |
| 2. | Cooking zone front left select button | 10. | Cooking zone indicator of rear left |
| 3. | Cooking zone front right select button | 11. | Cooking zone indicator of front left |
| 4. | Cooking zone rear right select button | 12. | Cooking zone indicator of front right |
| 5. | Minus button | 13. | Cooking zone indicator of rear right |
| 6. | Timer indicator | 14. | Timer display |
| 7. | ON/OFF button | 15. | Double zone select button |
| 8. | Safety lock button | | |

USING YOUR APPLIANCE

Before first use


The first time you use your appliance, you will find that the appliance will emit a 'new appliance' smell. We suggest removing the new appliance smell by heating your appliance up to clear out any smells before use. The odour that is often detected during this initial use is due to the evaporation of substances used to protect the oven during storage and until it is installed.

- You should switch on one cooking zone at a time, for 5 minutes at the maximum setting. This will help to eliminate any new smell that exists and evaporate any humidity that has formed on the heating elements during transit.
- Do not burn off more than one zone at once.
- You must place a saucepan filled half full with cold water on each zone as you burn it off.

Touch controls

- All operations are performed by means of the touch controls that can be found on the control panel.
- Each touch control has a visual display that corresponds to it.


Switching the hob top on

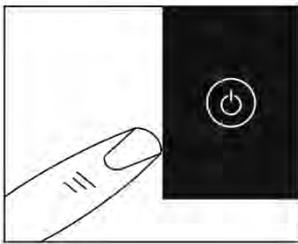


- Press the ON/OFF button (7) to switch on the appliance.
- The hob will beep once and all of the cooking zone indicators will light briefly, then go out.
- This means that the hob has entered stand-by mode.

Switching on a zone and setting a power level

NOTE: A zone must be selected within 1 minute of switching the hob on.

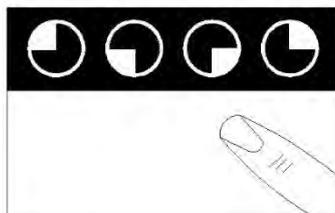


- Press the cooking zone plus button **(1)** - **(4)** of the zone that you want to use.

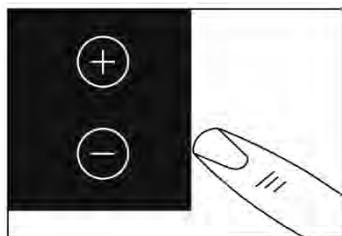


- Adjust the zone between power levels 1 and 9, using the plus **(9)** and minus **(5)** buttons. By holding down either of these buttons, the value on the zone indicator **(10)** or **(11)**, **(12)**, **(13)** will adjust up or down.

Switching off a zone

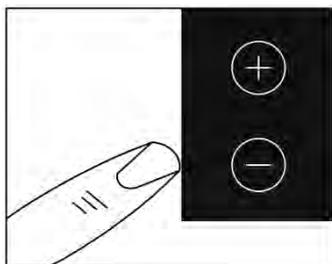


- Press the cooking zone, then press the minus button **(5)** of the zone that you want to switch off.
- Hold the button down until the number in the cooking zone indicator reaches "0". After a few seconds, the zone will switch off automatically.
- The letter "H" will show in the cooking zone indicator, (see the section on the "residual heat indicator" below).

Switching off the hob

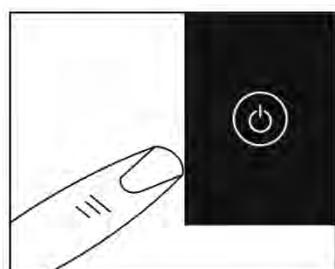


- Once you have switched off all of the cooking zones, you should turn off the hob.
- Press the ON/OFF button **(7)**.
- It is possible to turn the hob off at any time by pressing the ON/OFF button **(7)**.

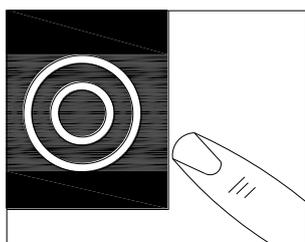

- If you want rapid cooking, select cooking zone, and press button **(15)**, turn on the hob, adjust the zone between power levels 1 and 9.
- If you cancel this cooking program, you should press the button **(15)** again.

Residual heat indicator

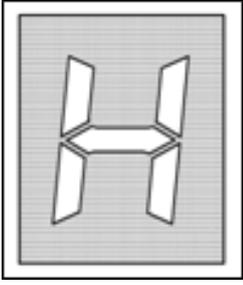


- After a zone is switched off, the corresponding cooking zone indicator **(10)** or **(11), (12), (13)** will show a flashing letter "H". This means that the temperature of the zone is over 60°C and is therefore still high enough to cause injury.
- When the temperature of the zone falls below 60°C, then the letter "H" will go out.

IMPORTANT: The residual heat indicator will disappear if the mains supply to the product is cut.



CAUTION: It is still possible to burn yourself on a hob zone, even when the temperature of it has dropped below 60°C.


Locking the hob top

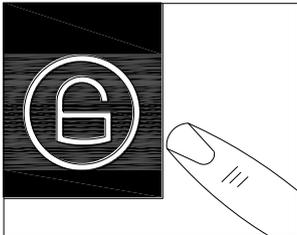

- The whole hob top can be locked by pressing the safety lock button **(8)** whilst the appliance is switched on.
- The timer display **(14)** will show "LO" to indicate that the safety lock feature has been activated.
- When the safety lock has been switched on, it will disable any of the other buttons on the control panel, apart from the ON/OFF button **(7)**.
- To disable the safety lock feature, you should press the safety lock button **(8)** again. The "LO" symbol will disappear from the timer display **(14)** and you are then able to adjust the power of any zone on the hob top.

The hob timer

Your hob has a timer which will countdown a period of time between 1 and 99 minutes. At the end of the countdown period an audible signal will sound.

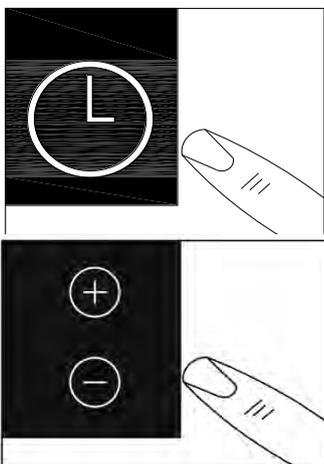

- Press the timer button **(6)**, use the plus buttons **(9)** and minus buttons **(5)** to set the countdown time.
- The timer display will show the countdown time that is being set.
- The timer display will increase in 1 minute intervals each time the timer plus button **(9)** is pressed.
- The timer display will decrease in 1 minute intervals each time the timer minus button **(5)** is pressed.
- If the set time exceeds 99 minutes, the timer display will return to showing 0.
- If you press the plus **(9)** and minus buttons **(5)** simultaneously, the timer display will reset to 0.

Setting a countdown time

The hob timer can be used as a minute minder at any time without affecting the cooking process or power setting.

- To set a minute minder countdown, press the timer button, use the plus **(9)** or minus **(5)** button so the timer display shows "- -".
- Use the timer button, press plus and minus buttons to adjust the time by 10 minutes.
- Once the desired time is set, release all buttons and after 5 seconds and the timer countdown will be set.
- The timer display will show the remaining countdown time.
- When the set time is reached, a buzzer will sound for 30 seconds and the timer display will show "- -".
- To cancel a countdown time that is in progress, press the plus and minus buttons simultaneously.



IMPORTANT: The countdown timer controls the entire hob, rather than an individual cooking zone. When this function is used, the hob will switch off entering stand-by mode.

Safety cut-off

If one or more of the cooking zones are accidentally left on, a safety cut off will activate after a certain period of time. The length of time depends on the power level that a zone or zones have been set on.

LEVEL	TIME LIMIT (hours)
1-2	6
3-4	5
5	4
6-9	1.5

If more than one zone is operating when one of the zones reaches its safety cut-off point, only the zone which has reached its safety cut off point will switch off.

INSTALLATION



The installation must be carried out by a suitably qualified person, in compliance with local electrical and building rules and specifications, and the instructions outlined in this manual.


Installing the ceramic hob

- Ensure that the appliance is installed in a suitable position, in consideration to adjacent walls, cupboards and protection for combustible materials in accordance with local rules.
- A suitable disconnection switch is to be incorporated in the permanent wiring. The switch is to be of approved type and positioned in accordance with local wiring and electrical rules and specifications. The switch must have 3 mm air gap contact separation in all poles, in the active (phase) conductor of the fixed wiring.
- The kitchen area should be dry and aired and equipped with efficient ventilation. When installing the ceramic hob, easy access to all control elements should be ensured.
- This is a Y-type design built-in ceramic, which means that its back wall and one side wall can be placed next to a high piece of furniture or a wall. Coating or veneer used on fitted furniture must be applied with a heat-resistant adhesive (100°C). This prevents surface deformation or detachment the coating.
- Hoods should be installed according to the manufacturer's instructions.

IMPORTANT: You must observe the ventilation requirements and install accordingly.


IMPORTANT: There are ventilation holes around the outside of the hob. **YOU MUST ensure that these holes are not blocked by the work top, when you put the hob into position (see figure).**

IMPORTANT: Do not use a silicone sealant to seal the appliance against the aperture. This will make it difficult to remove the hob from the aperture in future, particularly if it needs to be serviced.


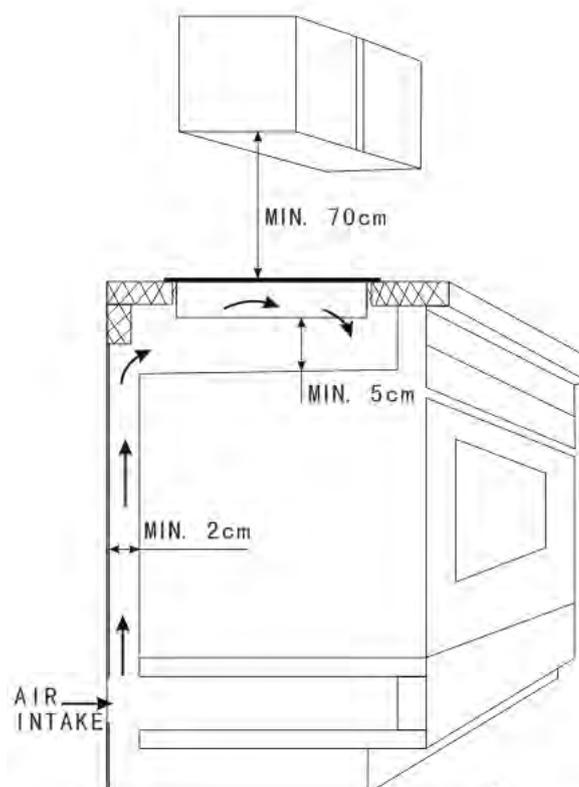


Assembly of ceramic hob

- Make an opening with the dimensions given in the diagram (560mm x 490mm) for the hob to be mounted on the benchtop.
- Check seal for perfect fit and overall cover. There is an overhang of 10mm around the cooktop. Lower the electric hob into place and align correctly.

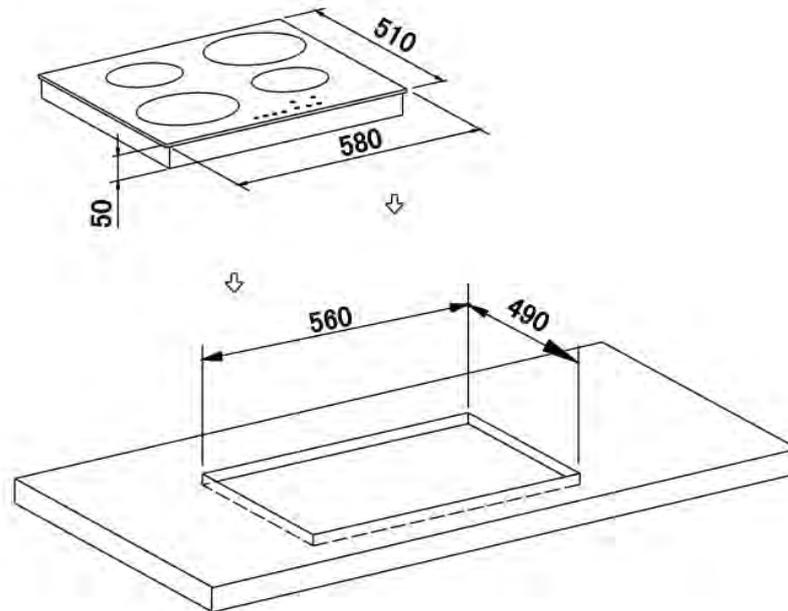


- Carefully remove the hob and turn over.
- There are holes on the base or the sides of the hob that you can fix the four brackets to. There are three holes in each one of the brackets.
- You should place the bracket on the underneath of the hob, in a position that is appropriate for the aperture that you have cut out. Using the screws provided, fix the bracket to the hob. These screws **MUST** be securely tightened.
- Insert the hob back into to the opening.

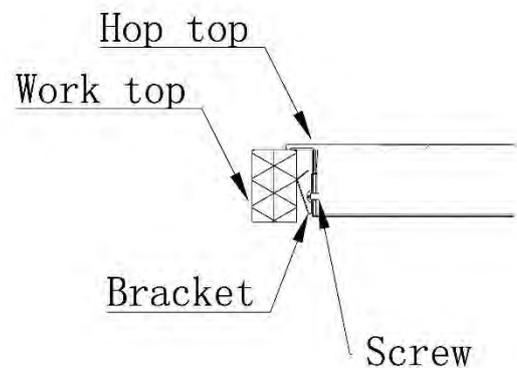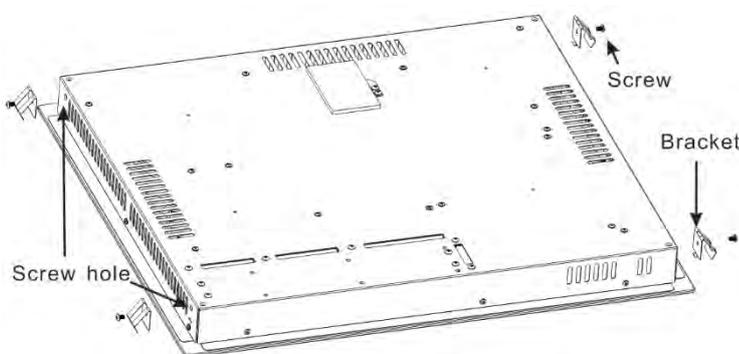

Fitting guidelines


The ceramic hob is manufactured to work with two-phase alternating current (400V2N~50Hz). The voltage rating of the ceramic hob heating elements is 230V. Adapting the ceramic hob to operate with one-phase current is possible by appropriate bridging in the connection box according to the connection diagram below. The connection diagram is also found on the cover of the connection box. Remember that the connection wire should match the connection type and the power rating of the ceramic hob.

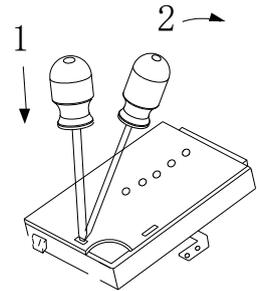

The connection cable must be secured in a strain-relief clamp.



WARNING! Remember to connect the safety circuit to the connection box terminal marked with . The electricity supply for the ceramic hob must have a safety switch which enables the power to be cut off in case of emergency. The distance between the working contacts of the safety switch must be at least 3mm. Before connecting the ceramic hob to the power supply it is important to read the information on the data plate and the connection diagram.

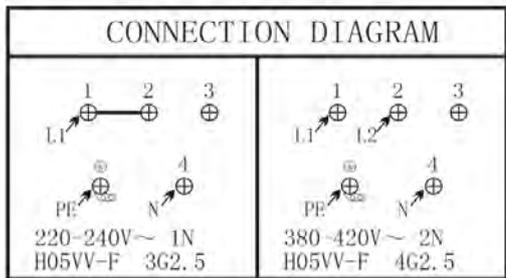Wires for each domino hob with touch control models			
Model	Adaptive voltage range and wires		The wiring diagram
	220-240 1N~ 50-60Hz	380-415 2N~ 50-60Hz	KADO K 1/5
SCC-4602B	H05VV-F 3G2.5	H05VV-F 4G2.5	

- The cable connections must be in accordance with the diagram located on the bottom of the hob.
- You should use a good quality screwdriver to carefully, fully tighten ALL of the terminal screws.
- If when the hob is first switched on, only two of the zones work, you should recheck that the terminal screws are all fully tightened. This should be done before contacting the Customer Care Department.
- **IMPORTANT:** The appliance must NOT be connected to the mains supply by means of a 13A plug and socket.
- This appliance must be wired into a 30A double pole switched fused spur outlet, having 3mm contact separation and placed in an easily accessible position adjacent to the

appliance. It should not be located above the appliance and no more than 1.25m away from it.


- The cable can be looped if necessary, but make sure that is not kinked or trapped when the hob is in position. Care must be taken to avoid the cable being in contact with hot parts of the appliance.

Replacing the mains supply cable

If the mains supply cable is damaged, then it must be replaced by an appropriate replacement. The mains supply cable should be replaced in accordance with the following instructions:

Switch the appliance off at the control switch

- Open the terminal block on the underside of the hob.
- Unscrew the terminal screws fixing the cable.
- The "green-yellow" earth wire must be connected to the terminal marked \perp . It must be about 10 mm longer than the live and neutral wires.
- The "blue" neutral wire must be connected to the terminal marked with letter (N) - the live wire must be connected to the terminal marked with letter (L).

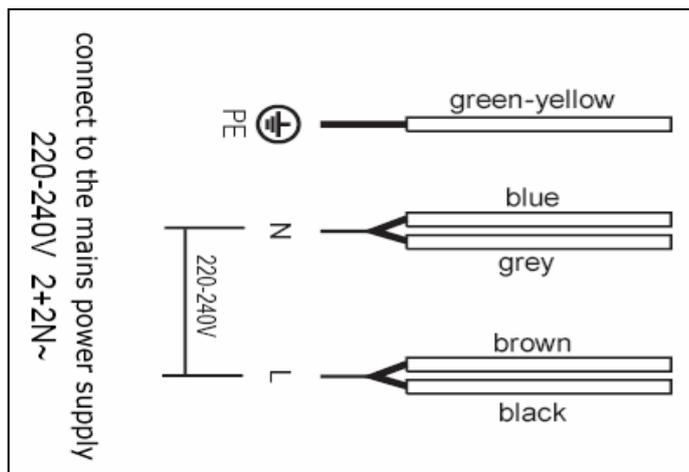

CLEANING AND MAINTENANCE

CAUTION!

Cleaning operations must only be carried out when the hob is cool. The appliance should be disconnected from the power supply before commencing any cleaning process.

Cleaning the ceramic hob top



Any residues that are left on the hob top surface from cleaning agents will damage it. You should remove any residues with warm water mixed with a little washing up liquid.



Abrasive cleaners or sharp objects will damage the hob surface; you should clean it using warm water mixed with a little washing up liquid.



You may find it easier to clean some deposits whilst the hob surface is still warm. However you should take care not to burn yourself if cleaning the hob surface when it is still warm.

After each use

- Wipe the appliance over with a damp cloth.
- Dry the appliance by rubbing the surface with a clean cloth.

Cleaning table

Type of deposit	Remove immediately?	Remove when the appliance has cooled down?	What should I use to remove the deposit?
Sugar or food/liquid containing sugar	Yes	No	Ceramic hob scraper
Tin foil or plastic	Yes	No	Ceramic hob scraper
Fat splashes	No	Yes	Ceramic hob cleaner
Metallic discolouration	No	Yes	Ceramic hob cleaner
Water splashes or water rings	No	Yes	Ceramic hob cleaner

Important!

The inside of the hob should only be washed with warm water and a small amount of washing-up liquid.



CAUTION! Ensure the heating plate is clean. A soiled zone does not transfer all of the heat. Protect the hob against corrosion. Switch off the hob when not in use. Do not leave pans with prepared dishes based on fats and oils unattended on the switched on plate; hot fat can spontaneously catch fire.



IMPORTANT: If your appliance appears not to be operating correctly, please make contact with the dealer.

DO NOT ATTEMPT TO REPAIR THE APPLIANCE YOURSELF!


Please note that if an engineer is asked to attend whilst the product is under guarantee and finds that the problem is not the result of an appliance fault, then you may be liable for the cost of the call out charge.

The appliance must be accessible for the engineer to perform any necessary repair. If your appliance is installed in such a way that an engineer is concerned that damage will be caused to the appliance or your kitchen, then they will not complete the repair.

TECHNICAL DATA

Specifications

Model	Rated Voltage:	Supply Connection: (double pole switched fused outlet with 3mm contact gap)	Max Rated Inputs:	Mains Supply Lead:
SCC-4602B	400V / 220-240V Vac 50-60 Hz	27.3 A	6.0 kW	3 core x 2.5 mm ² or 4 core x 2.5 mm ² (not supplied)

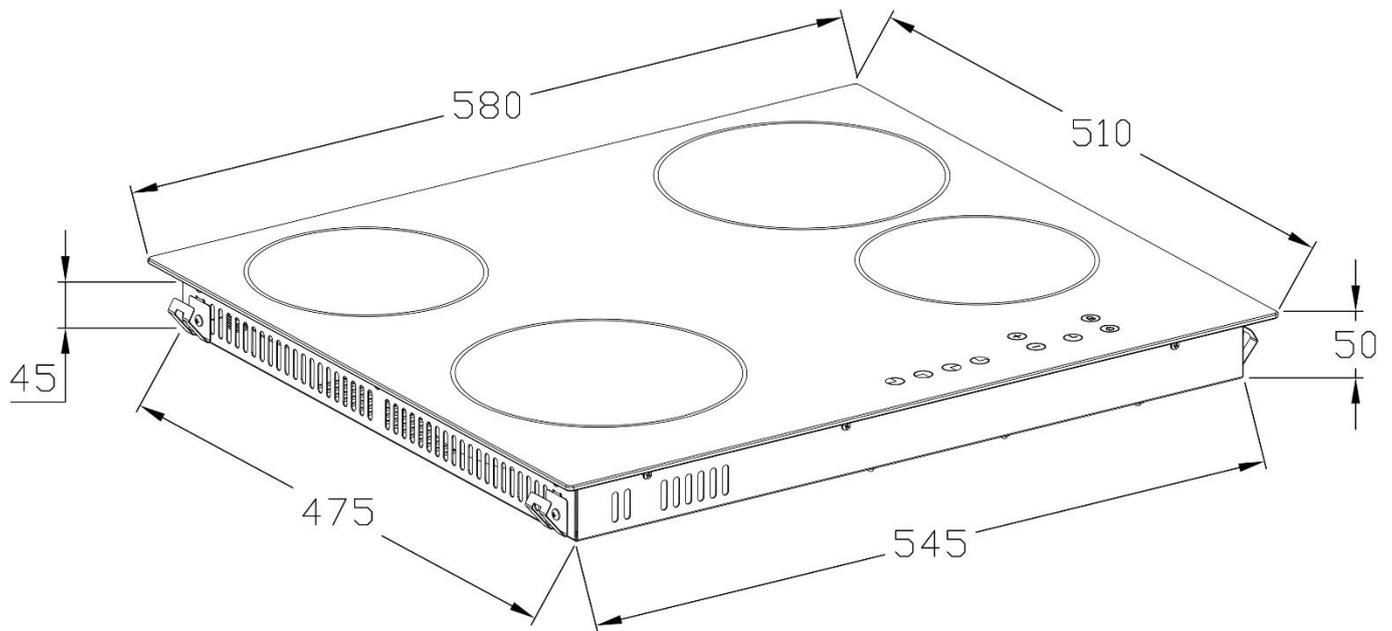

DECLARATION OF CONFORMITY

Australian Standards

This product has been designed and manufactured to comply with all relevant Australian and New Zealand Standards.

AS/NZS 60335.1 General Requirements for Domestic Electrical Appliances
AS/NZS 60335.2.6 Specific Requirements for Domestic Electrical Cooking Appliances
This appliance is SAA certified

Installation of the appliance must be only be undertaken by a licenced electrician who can provide a compliance certificate.

This appliance is intended for domestic use only.

European Standards

- **CE:** Appliance conforming to the European directives 89/336/EEC, 93/68/EEC, 2006/95/EC and subsequent revisions and "RoHS" directive 2011/65/EC.*
- The manufacturer declares that the oven is built using certified materials and requires the appliance to be installed in accordance with the standards currently in force. This appliance must be used by a trained person for domestic purposes only.
- * The RoHS directive stands for "the restriction of the use of certain hazardous substances in electrical and electronic equipment". This directive bans the placing on the EU market of new electrical and electronic equipment containing more than the agreed levels of lead, cadmium, mercury, hexavalent chromium, polybrominated biphenyl (PBB) and polybrominated diphenyl ether (PBDE) flame retardants.

European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE) (for European Union countries only)

This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

The symbol on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office or your household waste disposal service.