


SALINI

BUILT IN OVEN User Manual

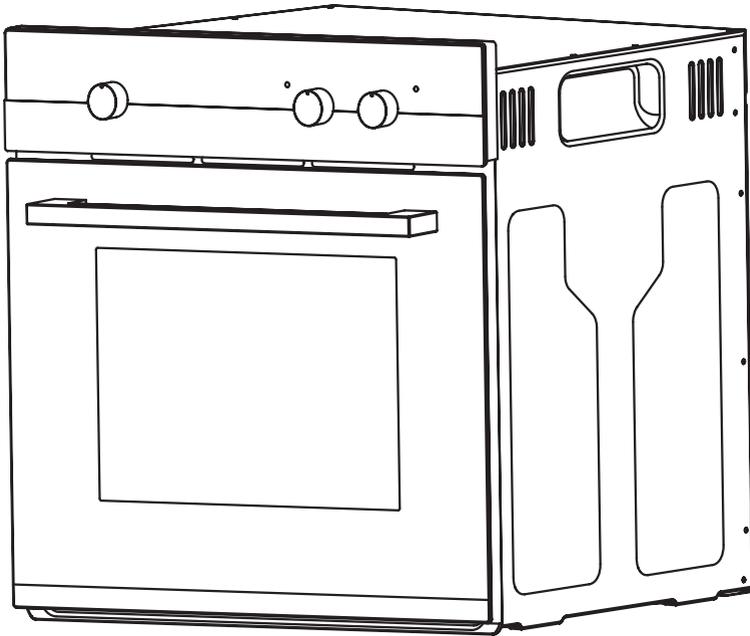

SOB-5002H

TABLE OF CONTENTS

IMPORTANT SAFETY INFORMATION	4-7
INSTALLATION	8-9
APPLIANCE OPERATION	10-12
PREPARING FOR FIRST USE	10
CONTROL PANEL OVERVIEW	10
OVEN FUNCTIONS	11
OVEN USE & COOKING GUIDELINES	11
QUICK INSTRUCTIONS	11
OPERATION CONTROLS	12
ACCESSORIES	13
CLEANING & MAINTENANCE	14-16
CLEANING	14
REMOVING SHELF SUPPORT	15
REMOVING DOOR	15
REMOVING GLASS PANELS FROM DOOR	16
CHANGING THE LIGHT GLOBE	16
TROUBLESHOOTING	17
COOKING GUIDE	18
TECHNICAL DATA & SPECIFICATION	19
DECLARATION OF CONFORMITY	20



Installation of the appliance must be only be undertaken by a licensed electrician.

This manual contains important information including safety, operational, maintenance & installation information which will enable you to get the most out of your appliance. Please keep it in a safe place so that it is easily available for future reference; for you or any person not familiar with the operation of the appliance.

IMPORTANT SAFETY INFORMATION

IMPORTANT INFORMATION

- Carefully read the following important information regarding installation, safety and maintenance. Keep this information booklet accessible for further consultations.
- This appliance is designed for domestic household use and designed be built into a standard kitchen cabinet or housing unit. For indoor use only.
- **IMPORTANT:** Your product warranty will be void if the installation is not in accordance with the instructions. The installation must be carried out by a suitably qualified person, in accordance with the with the manufacturer's instructions, and must be connected in accordance with all applicable electrical regulations.
- All installation work must be carried out by a qualified installer.
- Repairs may only be carried out by service engineers or an authorised service agent.
- The use of this appliance for any other purpose or in any other environment will void warranty.
- Your new appliance is guaranteed against electrical or mechanical defects, subject to certain exclusions, the foregoing does not affect your statutory rights.
- Check the appliance for damage after unpacking it. Do not connect or install the appliance if it has been damaged in transport as this will void the warranty.

WARNING AND SAFETY INSTRUCTIONS



CAUTION! The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements.

- This appliance complies with all current Australian safety legislation, and designed to operate safely in normal use, however the appliance surfaces will become hot during use and retain heat after operation.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **WARNING:** Accessible parts may become hot during use. Young children should be kept away.
- We strongly recommend that babies and young children are prevented from being near to the appliance and not allowed to touch the appliance at any time.
- If it is necessary for younger family members to be in the kitchen, please ensure that they are kept under close supervision at **ALL** times.
- When the door is open, do not allow children to sit or lean onto it. It may overturn causing harm and the door hinges may get damaged.
- Cleaning and user maintenance shall not be carried out by children without supervision.
- The packaging materials can cause injury or suffocation, dispose of them immediately and keep

away from children.

- Cleaning & Maintenance should be carried out in accordance with the “CLEANING AND MAINTENANCE” section to avoid possible hazards or potential damage to the appliance.

WARNING AND SAFETY FOR USE

- **CAUTION:** During use the appliance becomes hot. Care should be taken to avoid touching heating element inside the oven.
- Never touch the hot burners, inner sections of the oven, heating elements etc.
- Always use heat resistant oven gloves when handling food, dishes, shelves, trays or cooking utensils when the oven is still on or retaining heat from recent use.
- When the oven is on, or still retaining heat, use caution when opening the oven door, always allow enough distance for hot air and steam to escape before to avoid injury when handling food.
- Switch off the appliance after each use.
- Cooking should always be carried out with the oven door closed.
- Open the door of the appliance with caution. The use of ingredients containing alcohol may cause a mixture of alcohol and air.
- Avoid sparks or open flames near the appliance when opening the door.
- DO NOT use the appliance for any other purpose than its intended use.
- DO NOT place heavy objects on the oven door or lean on the oven door when it is open, as this can cause damage to the oven door hinges.
- DO NOT push on the door.
- DO NOT leave heated oil or fat unattended, as this is a fire risk.
- DO NOT place pans, baking trays, dishes or aluminium foil directly onto the bottom of the oven. The heat accumulation might damage the bottom of the oven or discolouration of the enamel. Discolouration of the enamel does not effect the performance of the appliance.
- DO NOT pour water into the hot cooking compartment.
- DO NOT use the product with the front door glass removed or if glass is cracked.
- DO NOT place or store any flammable liquids or materials, nor any easily combustible objects, on the appliance, inside it or nearby.
- DO NOT place greaseproof paper loosely over accessories during preheating. Always weight down the greaseproof paper with a dish or a baking tin. Only cover the surface required with greaseproof paper. Greaseproof paper must not protrude out and make contact with element.
- A drought is created when the appliance door is opened. Greaseproof paper may come into contact with the heating element as it may catch fire.
- We recommend the use of a drip tray to catch drippings, some drippings can stain the bottom of the oven cavity if they drip and burn during cooking.
- The drip tray handle should only be used to reposition the drip tray and NOT for removing it from the oven cavity. When removing the drip tray, you should ALWAYS use an oven glove.
- DO NOT allow electrical fittings or cables to come into contact with areas of the appliance that get hot.

WARNING AND SAFETY FOR CLEANING AND MAINTENANCE



CAUTION! Cleaning & Maintenance operations must only be carried out when the appliance is cool and disconnected from the power supply.

- Check that the appliance is cold. There is a risk that the glass panels might break if not cool.
- In the event the door's glass panels have been damaged, they must be replaced immediately, by contacting the authorised service centre.
- Be careful when removing the door from the appliance, the door is heavy & could cause injury.
- Cleaning of the oven should be carried out on a regular basis, to prevent the materials forming the surface from deteriorating.
- Remains of food or fat in the appliance may cause a fire.
- Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
- Clean the appliance with a soft moist cloth. Use only neutral detergents. Do not use any abrasive products, scouring pads, solvents or metal objects.
- If you use an oven spray, carefully follow the safety instructions given on the package.
- Do not clean the catalytic enamel (if any) with any kind of detergent.
- A steam cleaner is not to be used on any part of the oven.
- The oven must be switched off before removing the cover fan and that, after cleaning, the cover fan must be replaced in accordance with the instructions.
- **CAUTION:** Before replacing the light bulb, disconnect the appliance from the electric mains.
- The light bulbs used in this appliance are special lamps for electric household appliances. Do not use them for home lighting.
- Use only light bulbs with the same technical specifications.

ELECTRICAL CAUTION, INSTALLATION & SERVICE



CAUTION! Installation and servicing operations must only be carried out by a licensed electrician or authorised service person.

In case of any damage, switch off the appliance and disconnect it from the power supply.

Do not pull on the power cable to disconnect the appliance. Always pull on the plug itself.

If the appliance is damaged or faulty do not attempt use.

Do not open the casing of the unit, or attempt to open or dismantle sealed compartments.

In the event of any incident caused by a technical fault, disconnect the power and report the fault to be repaired before use.

WARNING: Ensure that the appliance is switched off before replacing the light bulb to avoid the possibility of electric shock.

Any work on electric equipment and systems may only be carried out by a qualified electrician.

The appliance is intended for installation into kitchen cabinet or enclosure, it is important to follow instructions to ensure correct installation. Improper installation will void the product warranty, and invalidate any claims.

- Heat, steam and moisture will be created during use of the appliance, take care to avoid injury and ensure that the room is adequately ventilated. If the appliance is going to be used for prolonged periods of time, then additional ventilation may be required.
- To work properly, the oven needs a sufficient amount of fresh air to flow. Make sure the flow of air is not jeopardised (eg. by fitting slats for thermal insulation in the cabinet where the appliance is built in). In this case, the necessary cold air must not get excessively heated by other sources of heat (eg. solid fuel stoves).
- Please consult with your qualified installer if you are in any doubt about the amount of ventilation that you will require.
- DO NOT install the appliance next to curtains or soft furnishings.
- Carry the appliance with at least two persons, appliance is heavy and requires two persons lift.
- DO NOT attempt to lift or move cooking appliances by using the oven door or handle, as this may cause damage to the appliance or result in injury to the person lifting the appliance.
- **IMPORTANT:** The adjacent furniture or housing and all materials used in the installation must be able to withstand a minimum temperature of 85°C above the ambient temperature of the room it is located in, whilst in use.
- Before obtaining access to terminals, all supply circuits must be disconnected.
- Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards.
- The appliance installation must be earthed.
- Use only suitable isolation devices: circuit breakers, fuses (plug fuses must be removed from the fuse holder), earth leakage circuit breakers and relays.
- The electrical system must be equipped with an isolation device which lets you disconnect the appliance from the power socket at all poles. The isolation device must have a contact opening width of no less than 3 mm.
- Appliance shall only be used with rated voltage and frequency, ensure that the appliance data plate matches the electrical system it will be installed in.
- This appliance must be installed in accordance with the installation instructions and in accordance with local regulations.
- **WARNING:** Always switch off the electricity supply at the mains during installation and during maintenance such as before replacing the light globe to avoid the possibility of electric shock.
- Always use an electric socket with a properly installed protective contact.
- Do not use multiple sockets or cable extensions.
- Insert the power plug into the socket only at the end of installation. Check that the power plug remains accessible after installation.
- If the power plug is loose, do not connect it to the socket.
- If the power cord is damaged it must be replaced by the manufacturer or a qualified service engineer.
- We recommend the use of only genuine parts for repairs.
- We decline any responsibility for injury or damage, to person or property, as a result of improper use or installation of this appliance.

INSTALLATION

⚠ WARNING! This product must be installed & serviced by a suitably qualified person.

- Any work on electric equipment and systems may only be carried out by a qualified electrician.
- Before obtaining access to terminals, all supply circuits must be disconnected.
- Failure to install in accordance with these instructions may result in electrical hazards.
- **WARNING:** Always switch off the electricity supply at the mains during installation and during maintenance such as before replacing the light globe to avoid the possibility of electric shock.
- This appliance must be installed in an appropriate built into cabinet or housing structure.
- For flush-mounted cabinets, the components (plastic or veneered wood) must be held together by heat-resistant adhesives (with at least 100°C); unsuitable materials and adhesives can cause buckling and voiding of glue hold which can compromise structure.
- The cabinet must permit the free passage of the electrical wiring and must be strong enough to bear the weight of the appliance and hold it in place securely.
- The oven must be mounted in a secure manner in the envisaged recess, it can be inserted into a column cabinet or under the top of a modular cabinet, while still providing adequate ventilation.
- Front ventilation slots must not be obstructed.
- Installation position must consider surrounding appliances and their installation requirements.
- Before connecting the appliance, make sure that the supply voltage marked on the Rating Plate corresponds with your mains supply voltage.

ELECTRICAL CONNECTION

A suitable disconnection switch is to be incorporated in the permanent wiring. The switch is to be of approved type and positioned in accordance with local wiring and electrical rules and specifications. The switch must have 3 mm air gap contact separation in all poles, in the active (phase) conductor of the fixed wiring.





The installation must include 1.2m of free cable within the enclosure for ease of installation and future maintenance.

To connect the oven power cord, loosen and remove the cover on the terminal block, in order to gain access to the contacts inside. Make the connection, securing the cord in place with the cable clamp provided and then immediately close the terminal block cover again. If required, to change the oven power cord, the earthing (yellow/green) conductor must always be 10 mm longer than the line conductors.

The mains cable must not touch any hot metal. Care must be taken to ensure that the temperature of the mains supply cable does not exceed 50°C. If the mains supply cable is damaged, then it must be replaced by an appropriate replacement.

INSTALLATION CUT OUT DIMENSION

The kitchen area should be equipped with efficient ventilation. When installing the oven, ease of access to all control elements and general operation should be ensured. (mm)

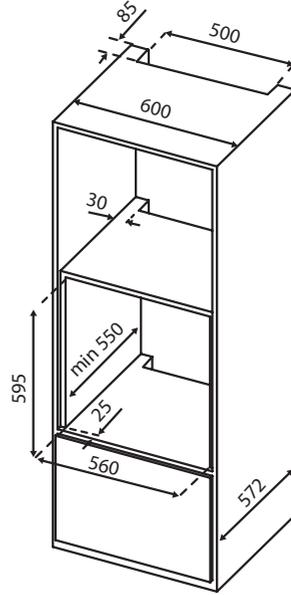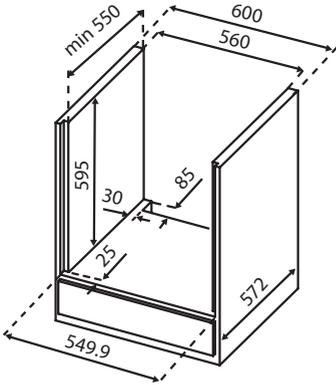

POSITIONING & VENTILATION REQUIREMENTS

FIGURE 1


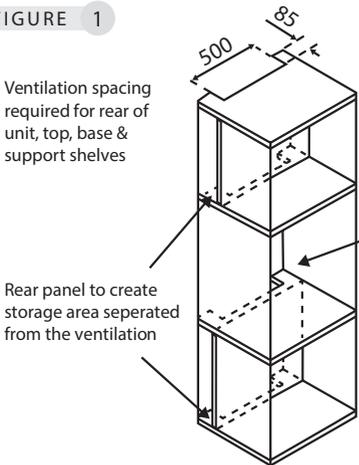


FIGURE 2

No backboard for oven location direct access to ventilation

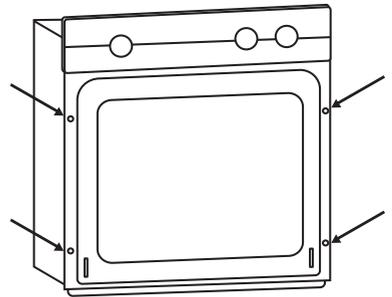

Ensure that the housing unit you will be fitting the oven into is of the specified size and that meets the ventilation requirements. Figure (1) shows the minimum ventilation cut-out requirement for the installation of the appliance into a tall housing unit, however the same minimum ventilation spacing applies to under bench installation. Ensure that the oven has been securely fixed into the housing unit. Secure the oven into the housing with four screws. These should be screwed through the oven cabinet and into the housing unit as seen in figure (2).

APPLIANCE OPERATION

PREPARING FOR FIRST USE

⚠ CAUTION! Read the important safety information before proceeding with use.

- Before operating this appliance, please read all the safety warnings and recommendations listed in the “IMPORTANT SAFETY INFORMATION” section at the beginning of this book.
- Before cooking for the first time, we recommend running an initial operation cycle to prepare the oven for cooking, (refer to “INITIAL OPERATION CYCLE” section)

INITIAL CLEAN


All accessories should be removed and cleaned with soapy water, then returned to their original position. The internal cavity should also be wiped down to ensure there is no packaging or other debris which can burn when undergoing the initial operation cycle.

INITIAL OPERATION CYCLE

To remove any residue from the oven that may have been left from the manufacturing process, the oven should undergo an initial operation cycle before cooking.

- Ensure that the room is well ventilated, with windows open during the cycle and cool down. It is normal if there is odour released while any residues are burnt off.
- Set the oven at the highest cooking setting and leave the oven on for half an hour with nothing inside the oven and the oven door shut.
- Once the operation is complete, carefully open the oven door and allow the oven cavity to cool down before closing the door.
- Once this cycle has been carried out the oven is ready to use for cooking.

OVEN CONTROL PANEL OVERVIEW

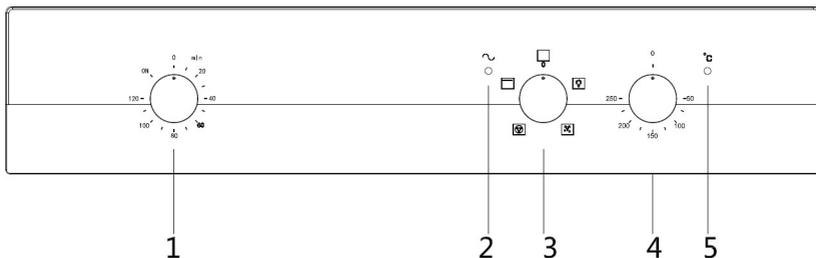

- (1) Timer Control Knob
(2) Power Indicator Light
(3) Function Control Knob

- (4) Temperature Control Knob
(5) Operation Indicator Light

OVEN FUNCTIONS

Function	Application
 Off	The appliance is switched off.
 Oven Lamp	To switch on the internal oven light without a cooking function.
 Defrost	The fan runs without heat to reduce the defrosting time of frozen foods. The time required to defrost the food will depend on the room temperature, the quantity and type of food. Always check food packaging for the defrosting instructions.
 Fan Forced Cooking	This method of cooking uses the circular element whilst the heat is distributed by the fan. This results in a faster and more economical cooking process. The fan oven allows food to be cooked simultaneously on different shelves.
 Grill	This method of cooking utilises the top element, which directs heat downwards onto the food. This function is suitable for grilling medium or large portions of sausages, bacon, steaks, fish etc.

OVEN USE & COOKING GUIDELINES

- Ensure all oven accessories that are not required are removed from the oven.
- Pre-heat the oven to the cooking temperature required for cooking before adding in the food.
- Place the cooking trays in the center of oven and leave space in between when using more than one, so that the air within the oven can circulate and ensure even cooking.
- Do not put oven trays on the base of the oven or cover it with aluminium foil. This will cause thermal accumulation. The cooking and roasting times will not coincide and the enamel may be damaged.
- Try to open the oven door as little as possible during cooking (the oven light remains on during cooking), this will ensure best energy efficiency and consistent cooking times.
- You should select a cooking temperature and function that is appropriate for the food that you are cooking. You should also ensure that the food is placed in an adequately sized dish and that you use the drip tray where appropriate to avoid food spilling into the bottom of the cavity.
- See the “COOKING GUIDE” section for more information & recommendations on energy efficiency.

QUICK OPERATION INSTRUCTIONS

Once the oven is installed and connected to the main, the Power Indicator light will turn on.


1. Select the cooking function (see “OVEN FUNCTIONS”) with the Function Control Knob.
2. Set the temperature required (between 50 - 250°C) with Temperature Control Knob.
3. Set the cooking time (between 0 - 120 minutes) by turning the Timer Control Knob to the required time. The operation will switch off automatically when the time finishes. If you do not require the timer to set the cooking time, select the “ON” option.

FUNCTION CONTROL

The oven Function Control Knob is used to set the mode of cooking. Refer to the description of the oven function to determine which mode to use (see "OVEN FUNCTIONS").

Depending on the function chosen, the appliance will utilise different elements within the oven cavity. When a function is selected, the power indicator light will come on.

To turn off the oven, return the knob to the "OFF" position. You must also select the Temperature Control and Timer Control knob for the oven to commence cooking.

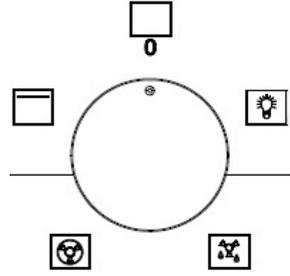


COOKING TEMPERATURE CONTROL

The oven Temperature Control Knob sets the required temperature of the oven. It is possible to regulate the temperature within a range of between 50 - 250°C.

The Operation Indicator Light will come on to indicate that the oven's heating elements are in operation. The light will turn off when the temperature set on the temperature control knob has been reached.

It will cycle on and off throughout the cooking time to maintain the correct cooking temperature.

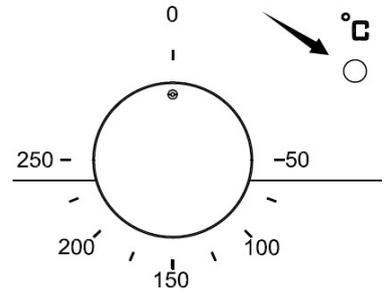


COOKING TIMER CONTROL

The oven Timer Control Knob is also required to operate the cooking functions.

If you want to operate the oven to a set time, turn the timer control knob to choose the cooking time between 0 - 120 minutes. When using the timer, the oven operation will be switched off when the time is finished.

If the timer is not required, you can operate the oven by turning the knob to "ON" setting.

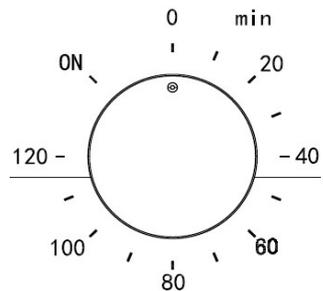

COOLING FAN

A tangential cooling fan is fitted inside of this appliance, to make the internal temperature of the oven stable and the external surface temperature temp. After the oven has been used the cooling fan will run on for a period of time, until the oven is sufficiently cooled, it will switch off automatically.


ACCESSORIES

The oven includes the following accessories:

- Wire Rack
- Dripping Pan


These accessories can be used in the oven placed on the 4 different rack position levels on the shelf supports installed on both sides of the cavity. When inserting the rack or tray into the shelf supports, take care to make sure they are correctly inserted.

NOTE: The accessories may deform when they become hot. Once they cool down again, they regain their original shape. This does not affect their operation.

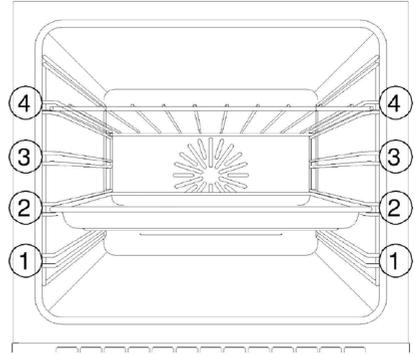

WIRE RACK

The wire rack installed in the correct position level will enable you to position the food in the oven for optimal cooking. Once the rack is installed, the food and ovenware can be placed onto the rack such as baking dish, baking tins, roasting pans etc. Care must be taken to position the rack correctly to avoid potential food spilling or burns. The wire rack must be used in the correct orientation with the raised edge at the back so that as you pull out the wire rack, the food does not slide out the back. Position should be set before oven is turned on, if repositioning is required during cooking, then care must be taken and heat protection gloves should be used to handle hot accessory and ovenware.

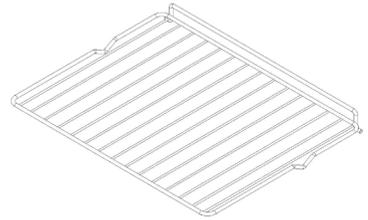

DRIPPING PAN

The dripping pan is normally positioned at the bottom of the oven to collect juices or drippings that may be released during cooking. If the dripping tray is not needed when cooking, it should be removed from the oven. Using the dripping pan will prevent food drippings landing on the bottom of the cavity. Food drippings that are released in cooking may stain and permanently discolor the bottom of the oven cavity. Water can be added to the dripping pan and placed on the first level when collecting cooking fats, pan should only be handled after it has cooled. Position should be set before oven is turned on, if repositioning is required during cooking, then care must be taken and heat protection gloves should be used to handle hot accessory and ovenware.



CLEANING & MAINTENANCE

 **CAUTION!** Cleaning & Maintenance operations must only be carried out when the appliance is cool and disconnected from the power supply. Ensure that you have read and understood the important safety information before proceeding.

Regular cleaning after each use will help protect finishes and reduce risk of debris catching fire. Surfaces of the appliance are susceptible to scratches and abrasions, so it is important to follow the cleaning instructions to avoid damage to any surface.

- Clean the glass oven door with a soft cloth moistened with warm soapy water. Dry it with a soft cloth. Do not use steel wool, acids or abrasive products that could damage the surface of the oven. Clean the oven control panel, taking the same precautions.
- Check that the appliance is cool after use. When cleaning and handling the glass there is a risk that the glass panels might break if not completely cooled.
- Extra care should be taken when handling the glass door, removing the door and glass panels to avoid injury and damage to the appliance.
- Clean the inside of the appliance after each use.
- Clean the oven accessories after each use. Use a soft cloth moistened with warm soapy water.
- To clean the metal surfaces, use a regular detergent.
- Do not clean non-stick accessories with strong detergents, this could damage the coating.
- If you use any form of oven cleaner on your appliance, then you must check that the cleaner is suitable for use on your appliance. Carefully follow the label instructions.
- All surfaces can discolour or alter if you use unsuitable products. In particular the front of the oven can be damaged by cleaning sprays and descalers. Remove residual detergent immediately.

CAUTION: Never use a steam appliance to clean the oven. Steam from an electric household appliance could reach live parts and cause short-circuiting.

 Some household detergents and cleaning products contain harsh chemicals and are abrasive, they can damage the finish of the appliance and potentially remove printed markings on the door. Damages caused by improper care will not be covered under manufacturers warranty.

REGULAR INSPECTIONS

You should also carry out regular inspections to ensure the appliance is running optimally, such as:

1. Regularly check the door seal. The door seal is around the frame of the oven compartment. The seals must be soft and elastic. To keep the door seals clean, use a non-abrasive sponge with warm water. Do not operate the appliance if the door seal is damaged.
2. Carry out periodic inspections of the control elements and other parts of the appliance. After the warranty has expired you should have a technical inspection of the appliance carried out at a service centre at least once every two years.
3. Fix any operational faults identified by periodical maintenance of the appliance.

REMOVING THE SHELF SUPPORTS

To clean the oven, remove the shelf supports following below instructions:

1. Remove the side racks but pulling and lifting them away from the spacers, then pulling them out of the holes, see figure (3).
2. Install the rack supports by following the procedure described in reverse order, placing the frame into the holes first before placing into spacers, see figure (4).

FIGURE 3


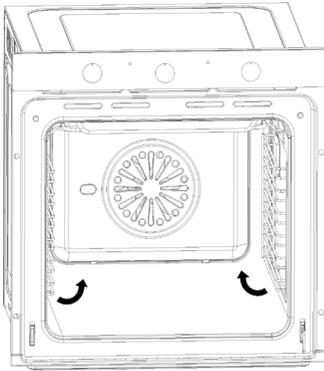


FIGURE 4

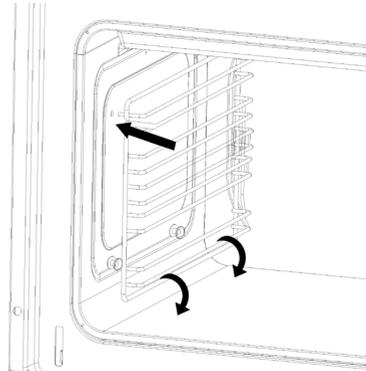



REMOVING THE DOOR FROM THE OVEN

When trying to remove the glass panels from the door, first remove the door from the oven.

To remove the oven door, follow the below instructions:

1. Open the door to fully open position.
2. Fold up both left & right side locking lever found on each of the door hinges, see figure (5a).
3. Firmly hold both sides of the door, then close the door to almost fully closed, pulling upward, then dislodge the hinges by pulling the door downward and pull out.
4. To replace the door, firmly hold door on both sides and lodge hinges back into the oven hinge holes in reverse, starting at the almost closed position.
5. Ensure both are inserted at the same time and that they are even.
6. Once lodged slowly open the door to fully open, then close off both of the locking levers (5b).
7. Double check that the door is replaced properly and functioning correctly.

FIGURE 5

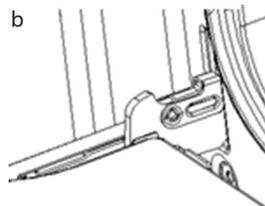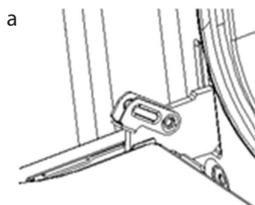


REMOVING THE GLASS FROM THE OVEN DOOR

Before removing the glass panels from the door, the oven door should be removed from the oven (see "REMOVING THE DOOR FROM THE OVEN" section).

After removing the oven door from the oven, you can remove the glass panels by following below:

1. Place the door on a clean and level surface with the inner glass facing toward you, see figure (6).
2. Unscrew and unfasten the bracket latch that is in the corner at the top of the door, see figure (6).
3. Next take out the glass from the second blocking mechanism and remove.
4. When cleaning is completed, fit the parts back on by following the reverse procedure to that described above to put the oven door back into its original condition.

FIGURE 6

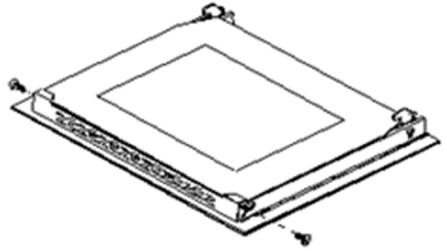

CHANGING THE LIGHT GLOBE

CAUTION! Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.

Before proceeding with changing the light globe, read all of the "IMPORTANT SAFETY INFORMATION" at the beginning of manual.

To replace the light globe:

1. Disconnect the power supply from the power socket or disconnect mains power.
2. Set all control knobs to the position "OFF".
3. Unscrew the glass lamp cover anticlockwise (note that it might be stiff)
4. Change the light bulb with a new one of the same type, making sure it is properly inserted into the ceramic socket.
5. Screw the glass lamp cover back into place.

FIGURE 7



IMPORTANT: Replace only with a suitable 'high temperature' bulb 25W, 220-240V, T300°C.

TROUBLESHOOTING

 Any electrical repairs to this appliance must conform to your local, state and federal regulations. If in any doubt, please contact the service centre.

- **CAUTION:** Always disconnect the unit from the power source when troubleshooting the unit.
- If troubleshooting has not solved the problem, contact an authorised service agent.
- Repairs may only be carried out by service engineers or an authorised service agent.
- Any modifications or use of this appliance for any other purpose or in any other environment than intended will void warranty.

Problem	Possible Cause	Solution
Oven is not turning on	The oven is off	Switch on the oven
	Power failure	Check the power in the house
	Failure of circuit breaker	Check the fuse
Oven will not heat	Oven function is not set	Set a cooking function, temperature and time
Inside oven light not working	Cooking has stopped	Turn on cooking function or light mode
	Blown/faulty globe	Replace light globe
Oven stops heating	Cooking timer has ended	Reset the timer or cook without timer
	Power failure	Check the power to appliance

 **IMPORTANT!** If your appliance appears not to be operating correctly, please contact the service center. Do not attempt to repair the appliance yourself.

Please note that if an authorised service person is asked to attend whilst the product is under warranty and finds that the problem is not the result of an appliance fault, then you may be liable for the cost of the call out charge.

The appliance must be accessible to perform any necessary repair. If your appliance is installed in such a way that an engineer is concerned that damage will be caused to the appliance or your kitchen, then they will not complete a repair.

This includes situations where appliances have been tiled in, sealed in with sealant, have wooden obstructions placed in front of the appliance, like plinths. Or if any installation other than the one specified by our company has been completed.

COOKING GUIDE

ENERGY SAVING

By using your new appliance with some considerations, you can save energy during everyday cooking. Below are some other tips to help with reduce energy consumption when cooking:


- Ensure that the oven door is closed properly when the appliance is in operation and keep it closed as much as possible during cooking.
- Cook with set timer to ensure cooking is finished at the required time .
- Metal plates improve heat insulation and energy efficiency, use metal ovenware.
- If the cooking time does not need to be measured precisely, place the food in the oven before preheating it. However we recommend adding appropriate cooking time.
- Use the residual heat to warm up other foods, or to keep foods warm. If you want to use the residual heat to keep a dish hot, choose the lowest temperature setting possible.
- Functions that utilise the fan are more energy efficient, use the cooking functions that include the fan to save energy.

BAKING GUIDE

Dishes	Accessories	Preheating (minutes)	Rack Position	Function	Temperature (°C)	Time (minutes)
Biscuits	Baking Pan	15	2		150-160	30-35
Small cakes	Baking / Cake Pan	8	3		165-175	30-35
Sponge cake with water	Spring Foam Pan	8	3		165-175	37-42
Leavened sweet	Baking Pan	8	3		165-175	35-40
Apple pie	Round Spring Foam Pan	10	2		160-170	40-60

This guide is for suggestion only. Preheating time based on preheating with oven on max temperature. Rack position is from bottom. Use dripping tray when appropriate.


You can utilise the wire rack to add more than one baking pan or tray:

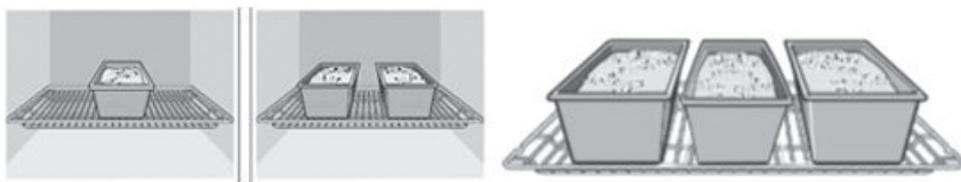

TECHNICAL DATA & SPECIFICATION

Specification

Model	SOB-5002H
Appliance	Built In Oven (Fan Forced)
Oven Dimension	590 x 595 x 520mm
Oven Capacity	56L
Oven Lamp	1x 25W
Rated Voltage / Frequency	220-240V / 50Hz
Max Rated Inputs (Total power)	2350W

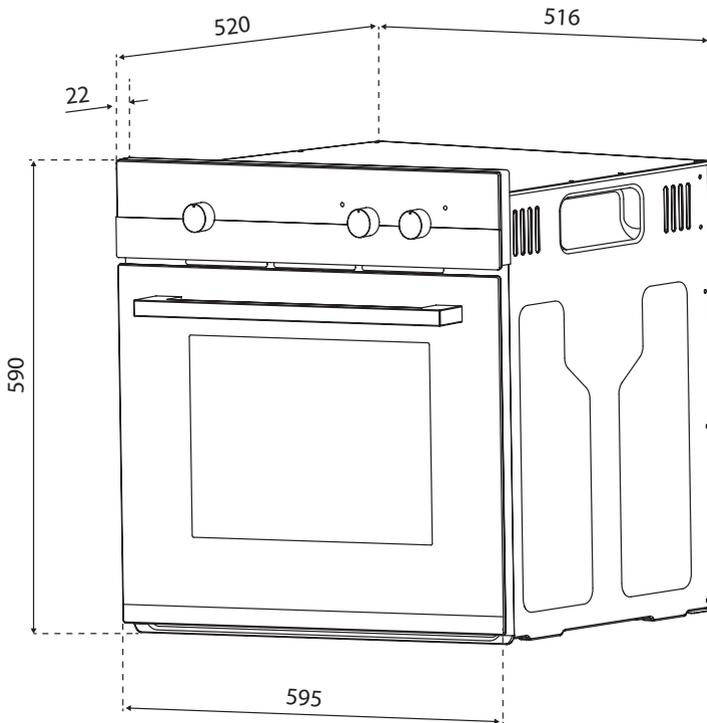

DECLARATION OF CONFORMITY

AUSTRALIAN STANDARDS

This product has been designed and manufactured to comply with all relevant Australian and New Zealand Standards.

AS/NZS 60335.1 General Requirements for Domestic Electrical Appliances

AS/NZS 60335.2.6 Specific Requirements for Domestic Electrical Cooking Appliances

This appliance is SAA certified.

Installation of the appliance must be only be undertaken by a licensed electrician who can provide a compliance certificate.

This appliance is intended for domestic use only.

DISPOSAL

Do not dispose of electrical appliances as unsorted municipal waste, use appropriate collection facilities. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by the inappropriate waste handling of this product. Contact your local council for information regarding collection systems available.

Copyright (C) SALINI Appliances 2021. All rights reserved.
The product specifications in this booklet apply to the specific products and models described at the date of issue, these specifications or recommendations may change at any time. You should check with your Dealer for the latest issue, or visit our website for more information.

SALINI